



Flute Pad Retaining Washer Dimpler Item # 227015



Thanks for ordering our 227015, Flute Pad Retaining Washer Dimpler.

Purpose:

This tool will put a dimple (or a depression) in the pad washer that will relieve the tension on the flute pad skin. With less pressure on the pad and skin the skin will have less of a tendency to tear as well as wrinkle.

Directions:

Slip the washer screw hole over the rod to lie flat on the die area. Put the punch over the rod to lie against the washer, then put the tool in a vise and close the vise, which will put pressure on the washer and press a depression into the washer. The pad screw will now go into the depression.

Enjoy,



A handwritten signature in black ink, appearing to read 'JL Smith'.